



ScrewKits







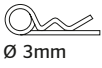


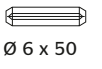





Fastening kits for air springs


















ContiTech offers complete fastening kits for ContiTech and PHOENIX air springs. They cover the main applications in trucks, trailers and buses.















Having the precise references for the particular air spring makes selecting the right kit child's play. You no longer need to spend time collating the various components. ScrewKits therefore simplify the work of distributors in cross-referencing with the particular air spring and of workshops in fitting it. In addition to the standard nuts and bolts, the ScrewKits also include special equipment.








- › Screw kits for ContiTech and PHOENIX air springs
- › 100 % precision fit
- › Precisely referenced
- › High-quality components
- › Tested to ISO standards
- › Standardized box for optimized logistics



KIT	No.	 Qty.		 Qty.		Others Qty.		Air Spring Type	
		ContiTech		PHOENIX					
K001	52726	M12 x 35	4	M12	2		 SAF	912 N P01 4004 N P05 4023 N P03 4023 N P06 4810 N P05	1 D 28 A-10 1 D 28 A-10 NP 1 D 28 A-12 1 D 28 A-13 1 D 28 B-10 1 D 28 B-10 NP 1 D 28 D-10 1 DK 22 E-5
K002	52727	M12 x 35	4	M12	4		 Hendrickson	810 MB 813 MB 912 N P02 4028 N P05	1 D 28 A-2 1 D 28 A-5 NP 1 D 28 B-2 1 D 28 B-5 NP 1 D 28 B-12 1 D 28 C-12 1 D 28 D-2 1 D 28 G-26 1 D 28 H-13
K003	52728	M10 x 20 M12 x 45	4 4				 Scania (Series 3)	4813 N P07	1 D 28 B-9
K004	52729			M16	1	 Ø 3mm	2  Scania (Series 4 and R)	4913 N P02 4913 N P04 6700 N P01 6700 N P02	1 D 28 H-16 1 D 28 H-16 NP 1 D 28 H-17 1 D 28 H-17 NP
K005	52730	M14 x 50	2	M14	3		 Volvo	6600 N P02 6605 N P01 6606 N P01 6606 N P02 6607 N P01 6608 N P01	1 DF 17 A-1 1 DF 17 B-1 1 DF 17 C-1 1 DF 20 D-1 1 DF 20 E-1
K006	52731			M10	2	 Ø 6 x 50	1  Volvo	4420 N P01 4713 N P02 4718 N P01 6609 N P01 6610 N P01 6612 N P01 6613 N P01	1 DF 22 C-1 1 DF 22 C-1 NP
K007	52732			M12 M18 x 1,5	2 1		 Solaris		1 DF 25 A-1 1 DF 25 A-1 NP 1 DF 25 A-2 1 DF 25 A-7 1 DF 25 A-20 1 DF 25 A-21
K008	52733	M16 x 45	1	M10	4		 VDL Bus,  DAF	836 M 836 M K1 836 M K11 836 M2 K1 836 N P05 836 N P06 836 N P09 836 N P10 836 N P14 836 N P27 887 M 887 M K1 887 M K2 887 M K3 887 M K4 887 N P03 887 N P06 887 N P09 889 M 889 M K2	1 DF 17 B-3 1 DF 23 A-4 1 DF 25-11 1 DF 25-13 1 DF 25-14 1 DF 25-15
K009	52734	M10x18/ M12x25 M12 x 190	2 1	M12	2		 Schmitz, Weweler	4157 N P06 4158 N P03	1 DK 20 A-1 1 DK 20 B-1 1 DK 20 B-1 NP

KIT	No.	 Qty.	 Qty.	Others	Qty.		Air Spring Type	
							ContiTech	PHOENIX
K010	52735	M12 x 170	1	M12	2	 Fruehauf, SMB	4157 N P10	1 DK 20 A-51
K011	52736	M12 x 70	2	M12	2	 Daimler TAS, Jost	4035 N P02 4157 N P14	1 DK 21 A-4 1 DK 21 C-4 1 DK 28 F-3 1 DK 28 H-3
K013	52738			M12 M16	2 1	 SAF	4022 N P05 4022 N P06 4022 N P07	1 DK 22 E-11 1 DK 22 E-13 1 DK 22 E-14
K014	52739	Ejot K100 x 40	3	M12	2	 SAF	4004 N P03 4022 N P03	1 D 28 E-2 1 DK 22 E-8 1 DK 22 E-9 1 DK 22 E-9 NP 1 DK 22 E-15
K015	52740	M12 x 35	4	M12 M20 x 1,5	2 1	 SMB	4156 N P15 4159 N P03 4159 N P14	1 DK 21 B-4 1 DK 23 K-1 1 DK 23 K-28 1 DK 23 L-27
K016	52741	M12 x 190	1	M12 M20 x 1,5	2 1	 SMB	4159 N P09	1 DK 23 L-9131
K017	52742	M10 x 35 M12 x 35	2 4	M10	2	 Den Oudsten		1 E 26-1
K018	52743			M16 x 1,5 M24 x 1,5	1 1	 Renault	4911 N P03 4911 N P04 4911 N P06 4912 N P07 4912 N P10 4912 N P13 4915 N P03 4915 N P06	1 DK 28 F-4 1 DK 28 F-5 1 DK 28 F-6
K019	52744			M12 M20	4 1	 Kässbohrer		1 DK 32 E-4
K021	52746	M16 x 1,5 x 70	1	M24 x 1,5	1	 Mercedes-Benz	644 N P21 4183 N P25 4185 N P21 4186 N P23 4187 N P23 4390 N P21 4390 N P24 4391 N P21 4737 N P21 4737 N P25 4737 N P26 4757 N P21 4757 N P29 4758 N P21 4758 N P23 4759 N P21 4838 N P21 4838 N P22 4838 N P23	1 KF 21-1 1 KF 21-1 NP 1 KF 21-2 1 KF 21-2 NP 1 KF 21-21 1 KF 21-22 1 KF 24-1 1 KF 24-1 NP 1 KF 24-2 NP 1 KF 24-9 1 KF 24-21 1 KF 24-29 1 KF 32-23 1 KF 32-23 NP
K022	52747			M22 x 1,5	1	 Irisbus	1415 N P01 1415 N P02 1782 N1 P01 1782 N1 P02 1924 N1 P05	1 E 23 A-1 1 E 23 B-1 2 F 18-1
K023	52748	M10 x 60	4			 various	FD 200-19 1/4 M10 FD 200-19 P04 FD 200-22 1/4 M10 FD 200-25 1/4 M10	SP 2 B 12 R SP 2 B 12 R-5 SP 2 B 12 R-A-10
K024	52749			 2 Ø 3mm		 Volvo	6600 N P01 6604 N P01 6604 N P03 6620 N P01	1 DF 17-1 1 DF 25 C-1 NP

KIT	No.	 Qty.	 Qty.	Others Qty.		Air Spring Type	
						ContiTech	PHOENIX
K025	52750	M12 x 70 2	M12 M22 x 1,5 2 1		 Weweler	4157 N P05 4157 N P09	1 DK 21 A-3 1 DK 21 A-31
K026	52751		M12 M20 x 1,5 2 1		 BPW (not standard)	4960 N P02	1 DK 21 K-3
K027	52752	M12 x 35 4	M20 1		 Daimler TAS		1 DK 25-1
K028	52753	M12 x 50 4	M12 2		 Schmitz, Weweler	4028 N P02	1 D 28 F-1 1 D 28 F-5
K029	52754	M16 x 70 2	M12 2		 BPW (complete)	881 MB 881 MB P30 940 MB 940 MB P30 941 MB 941 MB P30 942 MB 951 MB 4881 N P02 4881 N P30 4940 N P02 4941 N P02 4942 N P02 4961 N P02 4961 N P03 4962 N P02 4962 N P03 4963 N P01	1 DK 21 1 DK 21-1 1 DK 21-2 1 DK 21 K 1 DK 21 K-1 1 DK 21 K-2 1 DK 32 1 DK 32-1 1 DK 32-2 1 DK 32 K 1 DK 32 K-1 1 DK 32 K-2 1 DK 32 L 1 DK 32 L-1
K030	52755	M12 x 70 2	M12 M20 x 1,5 2 1		 Fruehauf (offset)		1 DK 23 L-25
K031	53106			 4 Ø 3mm	 Scania	6701 N P01 6702 N P01 6703 N P01 6704 N P01 6708 N P01 6708 N P02 6710 N P01 6710 N P02 6710 N P03 6710 N P04 6711 N P01 6711 N P02 6712 N P02 6713 N P02 6714 N P02 6715 N P02 6716 N P02 6717 N P01 6718 N P01 6719 N P01 FD 330-22 P07 FD 330-22 P08	1 DF 20 A-1 1 DF 20 A-2 1 DF 20 A-3 1 DF 20 A-4 1 DF 20 A-5 1 DF 20 A-6 1 DF 20 A-7 1 DF 20 A-8 1 DF 20 A-9 1 DF 20 A-10 1 DF 20 C-1 1 DF 20 C-2 1 DF 20 C-4 1 DF 23 A-1 1 DF 23 A-2 1 DF 23 A-3 1 DF 23 B-1 1 DF 23 B-2 1 DF 23 B-3 1 DF 23 B-4 1 DF 23 B-5 1 DF 23 C-1 1 DF 23 C-2 1 DF 23 D-1
K032	53107	M18 x 2 x 40 1	M12 x 1,5 1		 MAN	4705 N1 P03 4705 N1 P04 4883 N1 P06	
K033	53108	M18 x 2 x 85 1 M18 x 2 x 130 1	M12 x 1,5 1		 MAN	4862 N1 P02 4878 N1 P01 4880 N1 P01 4882 N1 P05 4882 N1 P25 4884 N1 P06 4884 N1 P07 4884 N1 P09 4884 N1 P26 4885 N1 P02 4886 N P01	1 DF 16-2 1 DF 19 B-1
K034	53110	M18 x 2 x 40 1 M18 x 2 x 130 1	M12 x 1,5 1		 MAN	4916 N1 P07	

KIT	No.	 Qty.	 Qty.	Others	Qty.		Air Spring Type	
							ContiTech	PHOENIX
K035	53111		M10	4		 Volvo (not standard)	6602 N P02	
K036	53112	M16 x 1,5 x 70	1	M24 x 1,5	1	Blind Plug Sensor Inlet	1	 Mercedes-Benz 4183 N P28 4186 N P25 4187 N P26 4390 N P22 4390 N P23 4391 N P22
K037	53782	M12 x 190 M8 x 20	1 2	M12	1		 Schmitz, Weweler	1 DK 23 L-1 1 DK 23 L-1 NP
K038	55117	M12 x 190 M8 x 20 M12 x 60	1 2 1	M12	1		 Schmitz, Weweler	1 DK 23 L-2



The content of this publication is not legally binding and is provided as information only. The trademarks displayed in this publication are the property of Continental AG and/or its affiliates. Copyright © 2024 ContiTech Deutschland GmbH, Hanover. All rights reserved. For complete information go to: www.continental-industry.com/disc1_en

